

# Connecting your Digital Decoder to your stereo TV equipped with video and audio IN and OUT connections and stereo VCR


## Connecting your Digital Decoder to your stereo TV equipped with video and audio "IN" and "OUT" connections and stereo VCR

### Instructions

Connect cable from wall to cable "IN" on your Digital box  
Using an S-Video cable and RCA cables, connect your Digital Decoder S-Video and audio output "OUT" to your TV S-Video and audio connections or Using RCA cables, connect your Digital Decoder Audio and Video "OUT" to your VCR audio and video "IN" connections  
Using RCA cables, connect your VCR audio and video "OUT" to your TV audio and video "IN" connections  
Select video input on your VCR (in need of help, consult your VCR user guide)  
Select on your TV either S-Video or video inputs to watch programs with your Digital Decoder or your VCR

### Special Notes

If you do not have a VCR, connect your Digital Decoder directly to your TV, using the RCA cables or an S-Cable  
S-Video and RCA cables are not supplied by Persona, visit your local retailer to obtain these items  
Only one VCR should be connected at a time

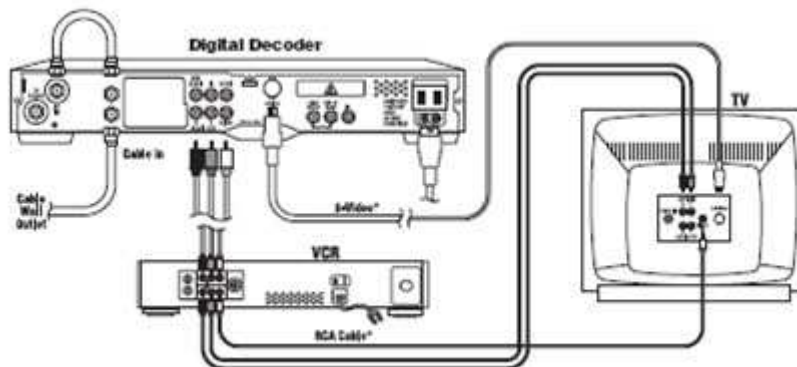

Your VCR and Video game system must be connected directly to your TV. This way you will avoid affecting the quality of your Digital Decoder's signal.